



- HA1138
- HA1137
- HA1142
- 2SD313
- 2SA489
- 2SB507
- 2SC789
- 2SC1384
- 2SC945
- 2SA720
- 2SC900
- 2SA763P
- 2SC1318
- 2SA725
- 2SC1312
- 2SC1344
- 2SC535
- 2SC461
- 3SK30

- SWITCHES**
- S<sub>1</sub> FUNCTION
    1. AM
    2. FM
    3. PHONO/MIC
    4. AUX
  - S<sub>2</sub> POWER SWITCH & OUTPUT SELECTOR
    1. POWER OFF
    2. SP A
    3. SP OFF
    4. SP B
    5. SP A+B
  - S<sub>3</sub> FM MUTING (ON POSITION)
  - S<sub>4</sub> TAPE MONITOR (OFF POSITION)
  - S<sub>5</sub> MODE (STEREO POSITION)
  - S<sub>6</sub> LOUDNESS (OFF POSITION)
- RESISTORS**  
 IN OHM, 1/4W, ±5% TOLERANCE UNLESS OTHERWISE NOTED. K: KΩ M: MΩ
- CAPACITORS**  
 IN μF UNLESS OTHERWISE NOTED. P: pF

**NOTES**

- V: SIGNAL VOLTAGE NECESSARY FOR OBTAINING 15W/8Ω OUTPUT POWER (1kHz).
- ↕ V: DC VOLTAGE AT NO INPUT SIGNAL.
- ↕ A: DC CURRENT AT NO INPUT SIGNAL.
- ⊖ V: DC VOLTAGE AT 15W/8Ω OUTPUT POWER.

Marked \* are for adjustment